


## Disabling Authorize Interlock

**Warning:** The authorization interlock is a feature designed to protect users from accidental activation or movement of the tool while they have their hands near the cutter. Only disable this feature if it is absolutely necessary to your work-flow and there is no risk of injury

- 1 Open the configuration menu from the FabMo dashboard.



- 2 Select the "Machine" tab.

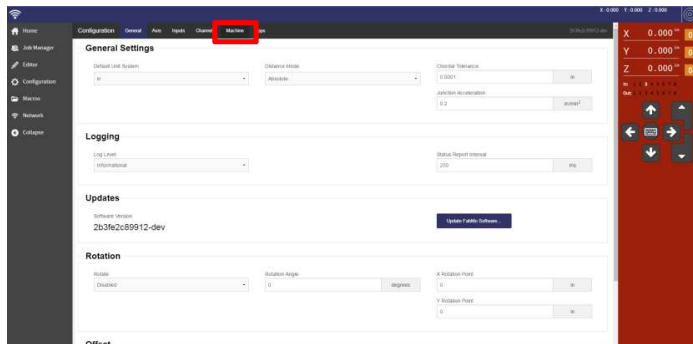

- 3 Scroll down to authorization and select "No Authorization" under input.

