


## Laser Sight 2.0 User Instructions


- 1 To install the laser sight; remove your dust foot with a strong downward tug.

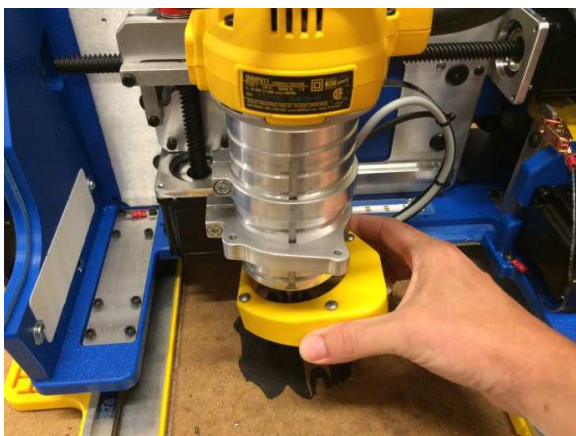


- 2 Snap your laser sight into the same place that your dust foot was attached.




- 3 Turn the laser sight on by flipping the toggle switch on the underside of the laser sight case.

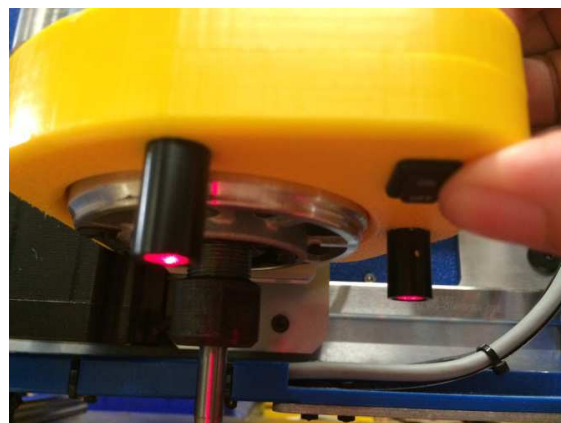


- 4 Check the alignment of the two laser lines with the tip of your bit.

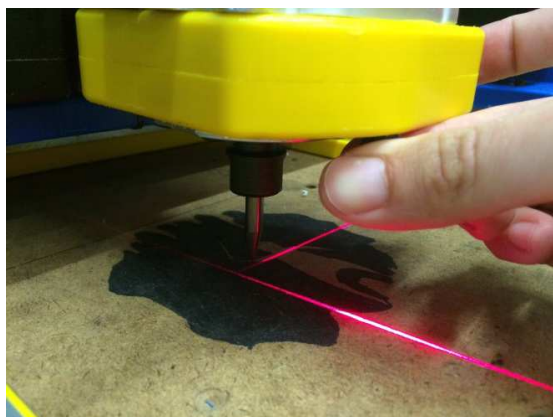

- 5 The laser lines were aligned before your laser sight was shipped out, but if you find that they need to be adjusted, simply twist the lasers until the alignment is accurate for your tool.

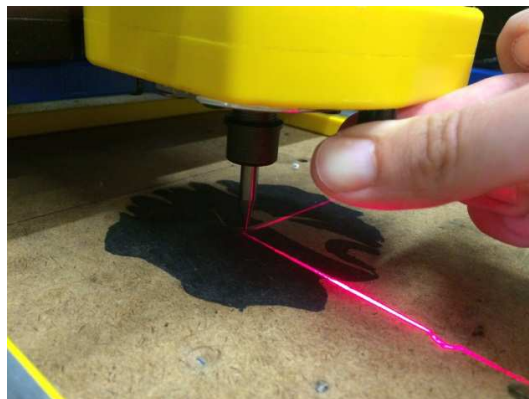

- 6 Use your laser sight to set up cuts as you move your handibot around on large surfaces!

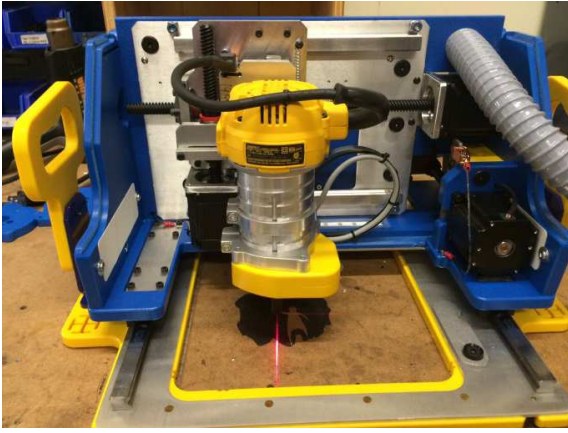

- 7 Replace your battery by pulling it out of the holder on the side of your laser sight. Use CR-2032 3V coin batteries for longest life.

